


## Adjustable angle pier assembling


In order to provide a safe shipment, reducing as much as possible shipping costs, the Adjustable Angle Pier comes pre-assembled in two main parts inside a compact package



The first operation to be performed is to take out of the box the pier and the central base and prepare the screws required to assemble the two parts.

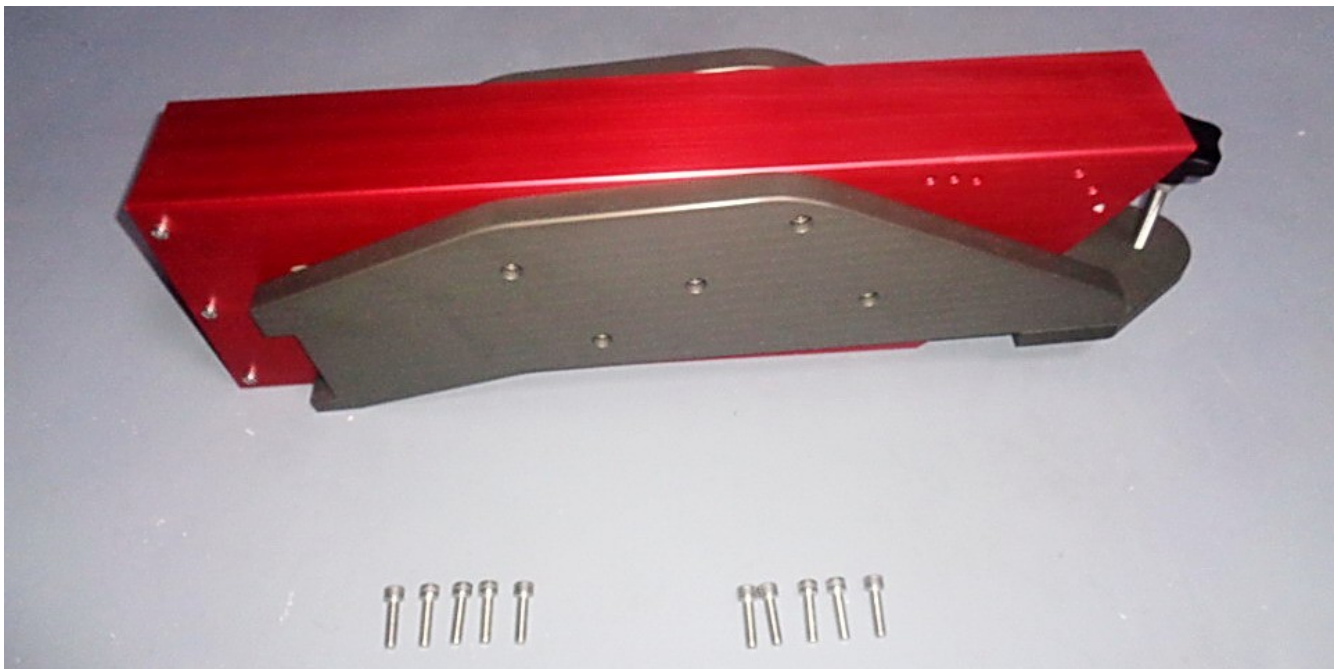


Then take out the pier from the central structure.

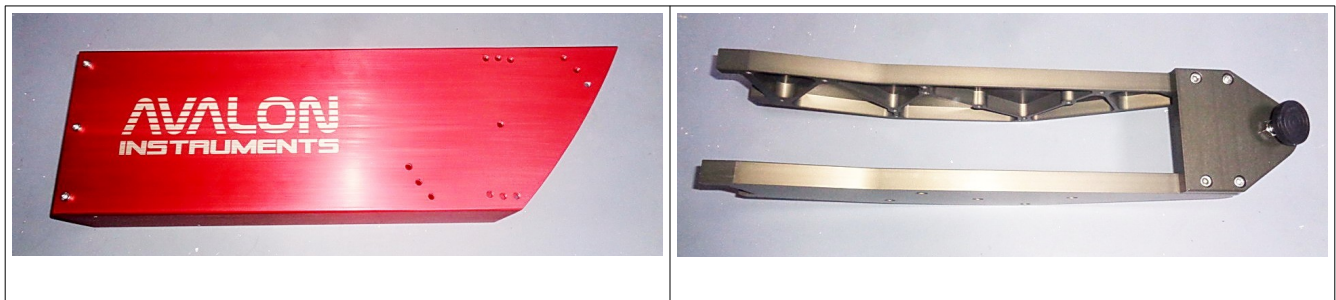

The Adjustable Angle Pier can be assembled in three different angle position, on depending on the user configuration. In the example available in this instructions, the Pier has been assembled in the middle position.

In order to allow an easy assembling procedure, the central structure comes with the fixing screws a bit loosened. In this way, the correct threaded hole for the choosen position will be finded easily.

After the first screws has been fixed, it is possible to gently lean the pre assembled components on one side and fix the other screws (5 per side).

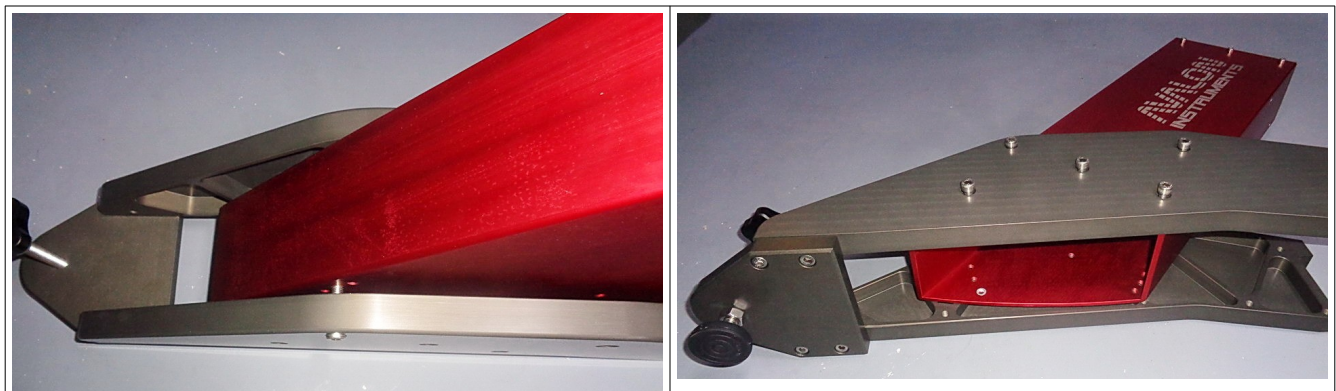


After the five screws has been tightened on one side, it is possible to reverse the Adjustable Angle Pier on the other side to fix the remaining 5 screws.





At this point is possible to stand up the Adjustable Angle Pier and assemble the final part, the rear feet support bar.

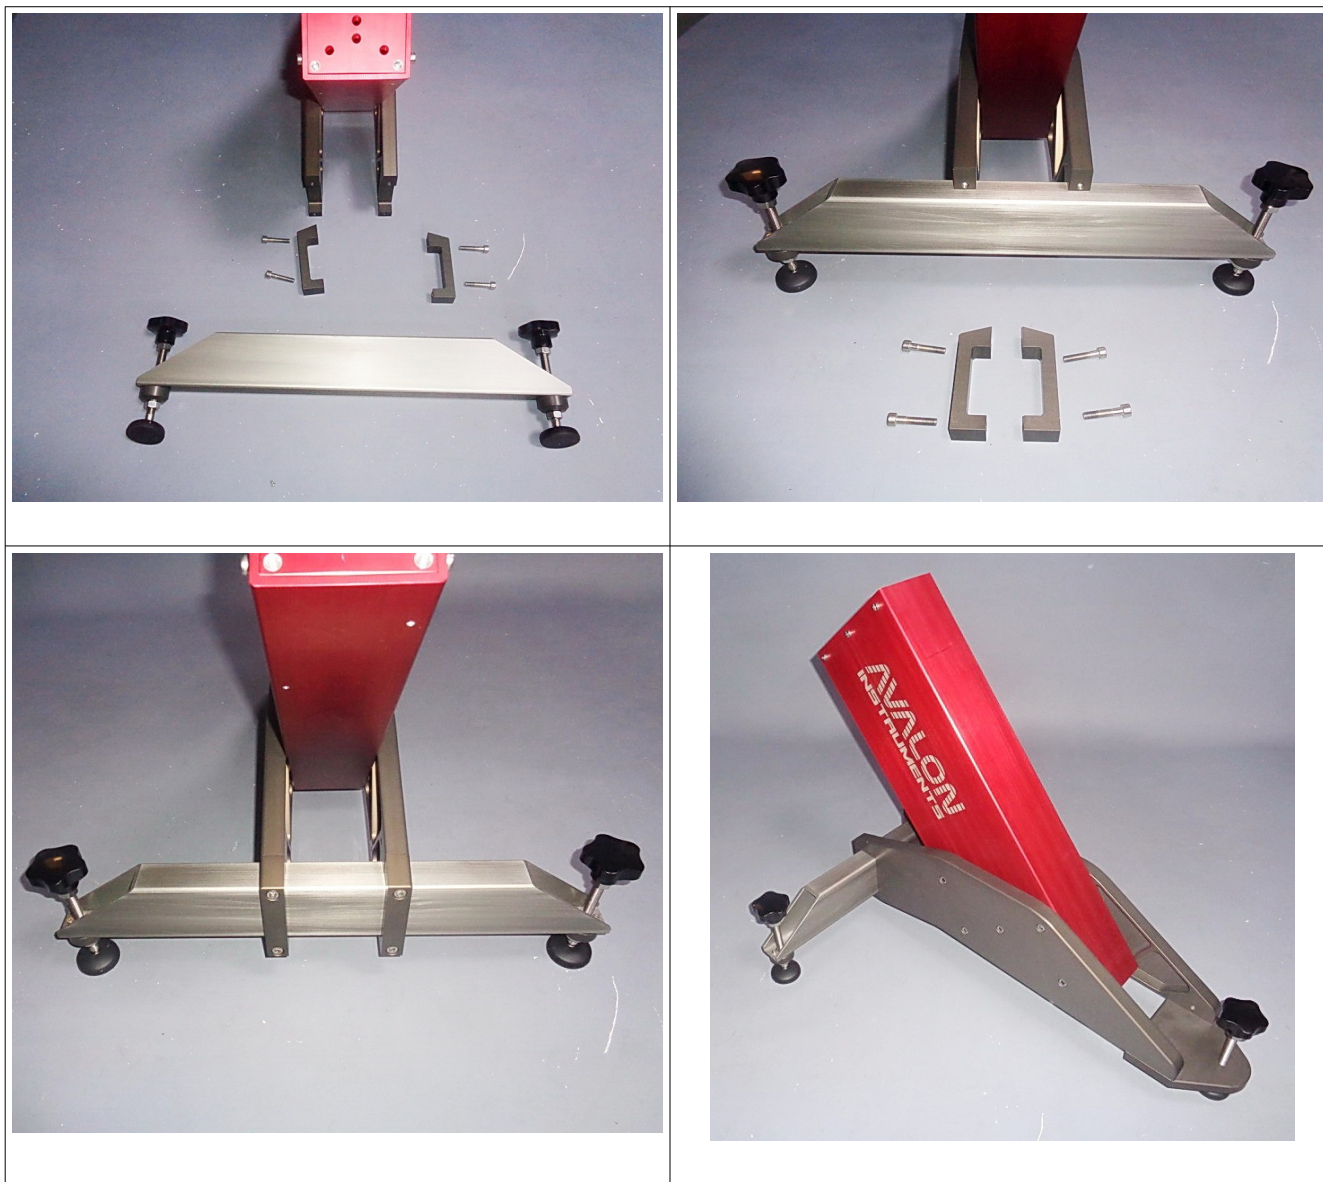

After the rear feet support bar assembling, the Adjustable angle Pier will be ready to be used.